

WS-MMW-005 Instruction Manual



Principle of Operation

The solid state wind sensor type MMW-005 uses a special chip to measure wind direction and wind speed, based on the temperature differences on the chip surface. These temperature differences are processed by a small microprocessor in the sensor, resulting in a serial signal for the indication of wind direction and wind speed. The output signal of the sensor is RS-422 and is standardized according to NMEA-0183.

Wind Sensor Installation

Always ensure that the sensor is installed away from obstacles (i.e. possible causes of turbulence) in order to obtain the best possible wind measurements. The correct installation height for the wind sensor is 10 meters above ground level.

Mount the base of the wind sensor (see Fig. 1) with 3 bolts on a horizontal surface.

Route the wind sensor cable from the top of the sensor through the base.

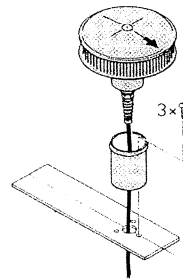


Figure 1

Once you have established the north, you can push the sensor, with the arrow pointing north (see Fig. 2 wind sensor top view) and using some force, into the base until it “clicks”.

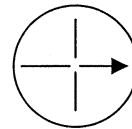


Figure 2

Now that the sensor is mounted, you can install the cable and connect the wind sensor to your equipment or PC.

Wind Sensor Connection

| | |
|-----------|---------------------|
| White | = +12 VDC / 150 mA |
| Brown | = GND |
| Yellow | = Signal + (RS-422) |
| Green | = Signal - (RS-422) |
| Shielding | = Ground |

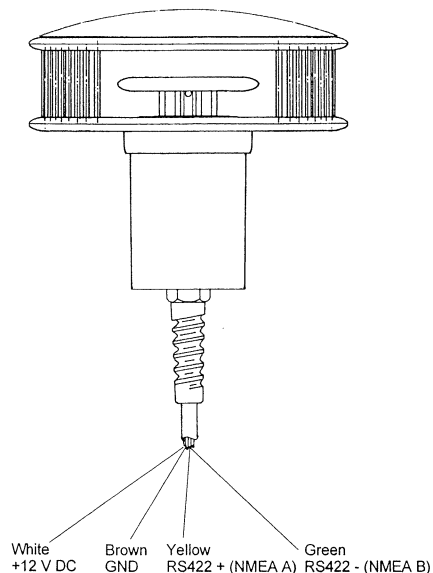


Figure 3

Output String According to NMEA 0183:

NMEA A = YELLOW
 NMEA B = GREEN
 Baud rate = 4800
 Data bits = 8
 Stop bits = 1
 Parity = none

Format: \$WIMWV,ddd,R,ss.s,M,A<CR><LF>

Description:

\$ = Start of sentence
 WI = Device type: Weather Instruments
 MWV = Wind speed and direction
 ddd = Wind direction value [0..359°]
 R = Relative to the vessel (not applicable)
 ss.s = Wind speed value [0..25.5 m/s]
 M = Unit for wind speed [m/s]
 A = Data always valid for MMW-005

Wiring Diagram for PC with Mains adapter

The wind sensor can be connected directly to the RS-232 port of a PC (see also Figure 4). Connections should be made according to the following table (table 1). Depending on the type of connection, you can use a 9- or 25-pole Sub-D:

Table 1: Pin Connection Sub-D Connector

| Wire | 9p Sub-D | 25p Sub-D | Supply |
|--------|----------|-----------|--------|
| White | | | +12V |
| Brown | 5 | 7 | GND |
| Green | 2 | 3 | |
| Yellow | N.U. | N.U. | N.U. |

N.U. Not Used

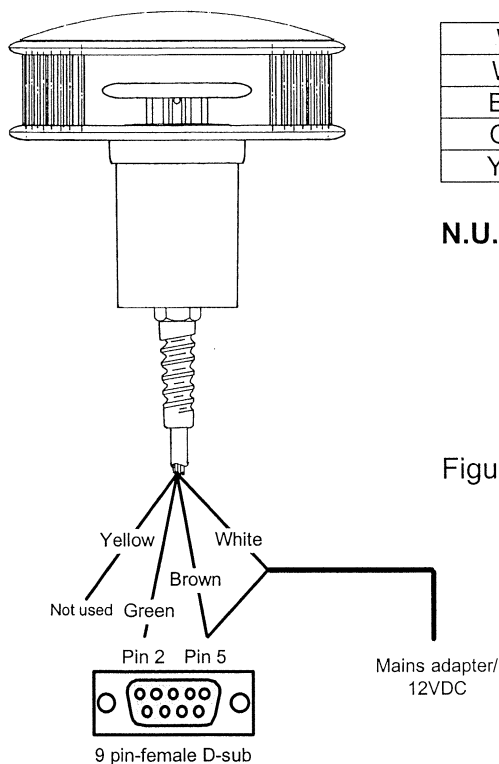


Figure 4

Wiring Diagram for PC with battery

The wind sensor can be connected directly to the RS-232 port of a PC (see also Figure 5). Connections should be made according to the following table (table 2). Depending on the type of connection, you can use a 9- or 25-pole Sub-D:

Table 2: Pin Connection Sub-D Connector

| Wire | 9p Sub-D | 25p Sub-D | Supply |
|--------|----------|-----------|--------------------------|
| White | | | +12V Red(+Battery) |
| Brown | 5 | 7 | GND Black (- Battery) |
| | | | |
| Yellow | N.U. | N.U. | N.U. |

N.U. Not Used

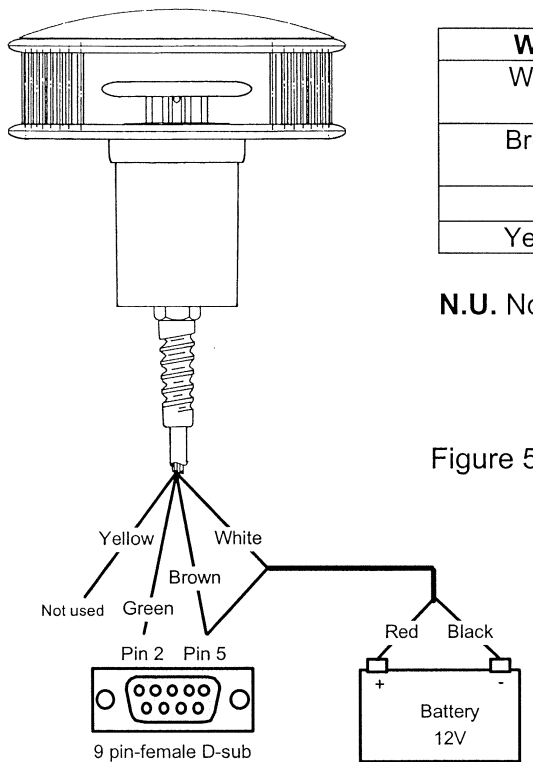


Figure 5

Maintenance

The wind sensor has no moving parts, and requires no other maintenance than the cleaning of the sensor itself. The time interval for cleaning depends on the installation site.

A calibration certificate with a validity of 1 year can be provided, after the wind sensor has been tested in Mierij Meteo's wind tunnel.

Technical Specification

| | | |
|--------------------|--|--|
| Operating Range | : Wind speed | : 0...25 m/s |
| | Min. wind speed | : 0,2 m/s (<i>values < 0,2 m/s = 0 m/s</i>) |
| | Wind direction | : 0..360° |
| | | <i>values for wind direction at wind speed < 0,5 m/s = 0°</i> |
| Inaccuracy | : Wind speed | : 0,5 m/s ± 3% @ 20°C |
| | Wind direction | : ± 3" @ 20°C |
| Response time | : < 1 second | |
| Stabilization time | : < 1 hour after switching on | |
| Dimensions | : 0 120 mm, height 105 mm | |
| Weight | : 200 grams | |
| Material | : Stapron N | |
| Operating temp. | : -25....+70°C | |
| Static discharge | : The instrument is protected against outside inductive interference up to a discharge power of 600 Watt | |
| Water ingress | : Sealed to IP65 | |
| Mounting | : Vertically, free-standing | |
| Connection | : 4-wire cable (0.34mm ²), shielded | |
| Supply voltage | : 12 V DC +/- 10% | |
| Power consumption | : 125 mA max. continuous | |
| output | : RS-422 (NMEA 0183 protocol) serial | |
| Baud rate | : 4800 | |
| Data bits | : 8 | |
| Stop bits | : 1 | |
| Parity | : none | |
| Warranty | : 1 year | |

